

Mains Tap Systems

Important: To comply with water regulations your tap must be fitted with a double check valve. If your tap has a small nut on the underside it has one fitted if not changing the tap is the easiest option. If in doubt consult a qualified plumber or call :-
0151 513 5400 email info@watermate.co.uk

Installation Guide

- Plan out the best route for the main 13mm supply hose, consider disguising it behind foliage or under forest bark for example. The hose can be secured to walls and fences with masonry nail clips supplied with some of the kits. It can also be buried under soil and paths make sure it is not going to be in an area that is cultivated. Use a conduit under paths, overflow pipe from a builders merchants is ideal. Hold down stakes are also available on the website.
- Attach the tap connector to the tap or to the bottom of the timer if one is being used. Measure the hose to the first joint cut and soften in hot water -be careful- then attach it to the tap connector at one end and to the joint at the other. If you need to separate a joint pour hot water on it first.
- Continue to fit the supply hose into the areas you are going to water with the tees and elbows supplied. When you have completed your layout flush the line by turning the tap on then off and fit an end stop. Connecting the jets:- Break off the connector from the basket/pot spikes or 30cm border stakes. Decide where you are going to connect into the 13mm hose and using the orange key/punch make a hole in the hose. Insert the connector into the hole ensuring it is over the barb.
- Baskets and pots** — Attach the 4mm hose to the connector and cut to length required. Running the hose at the back of the pot or behind drain pipes for baskets can help to disguise the hose. Attach the hose to the wall with small masonry nail clips if required. Attach the spike to the hose and place in the basket, pot or trough. The flow can be controlled by the adjustable top on the spike, they can also be turned off.
- Borders** — Attach the 4mm hose to the connector and cut to length required. We suggest running the main supply hose at the back of the border and bringing the 4mm hose to the front or centre and attach to the 30cm stake. A selection of jets is available to ensure complete coverage. Screw the selected jet into the top of the stake. Position the stake to obtain ideal direction and coverage of watering.
- Soaker dripline** — Connect the soaker dripline to the 4mm straight connector and run down the length of the area to be watered close to the plants. Cut and fit a 4mm end stop into the soaker dripline, continue fitting extra runs approximately 30cm apart. A line of 13mm supply hose can water approximately 20 runs of soaker dripline 10 metres long.

Mastermind Products Ltd

www.watermate.co.uk

Thank you for purchasing this irrigation system. Installation of your system is quick and easy however if you do require any assistance please do not hesitate to contact us. 0151 513 5400 — info@watermate.co.uk

Helpful Efficient Use Guide
See Reverse Side of instruction sheet

