



MASTERMIND

Connection Diagram

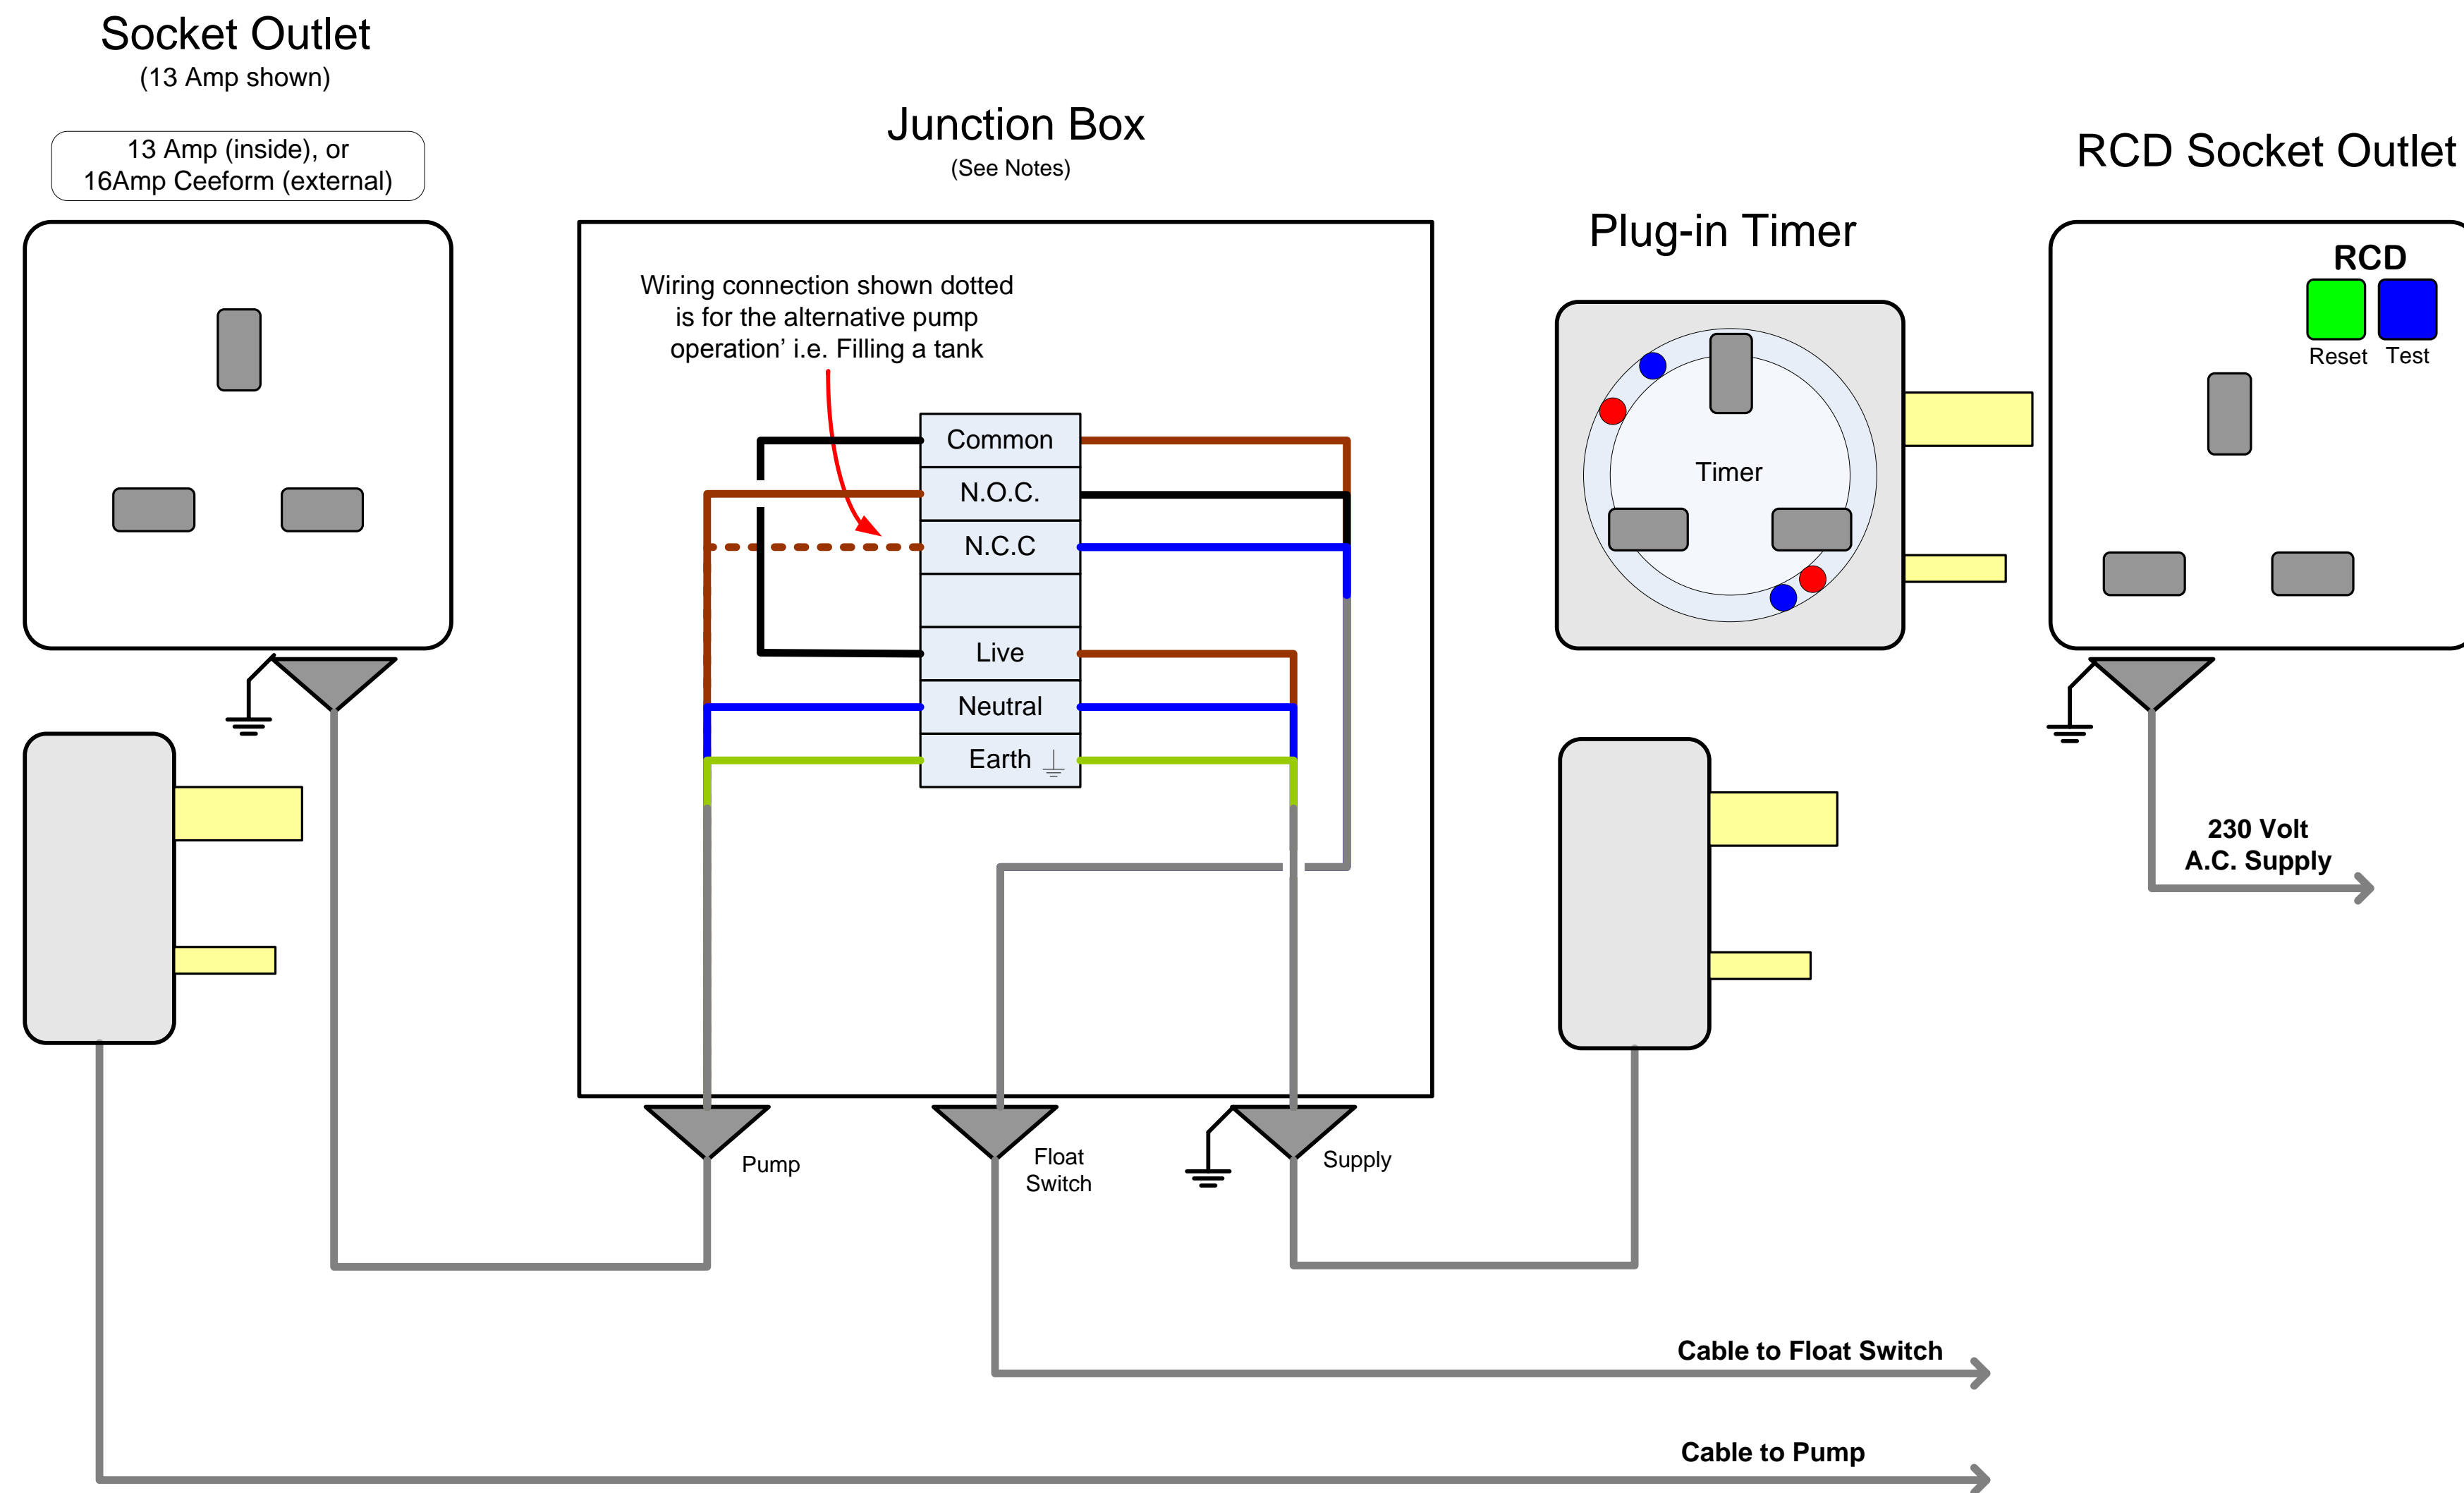

Schematic Diagram

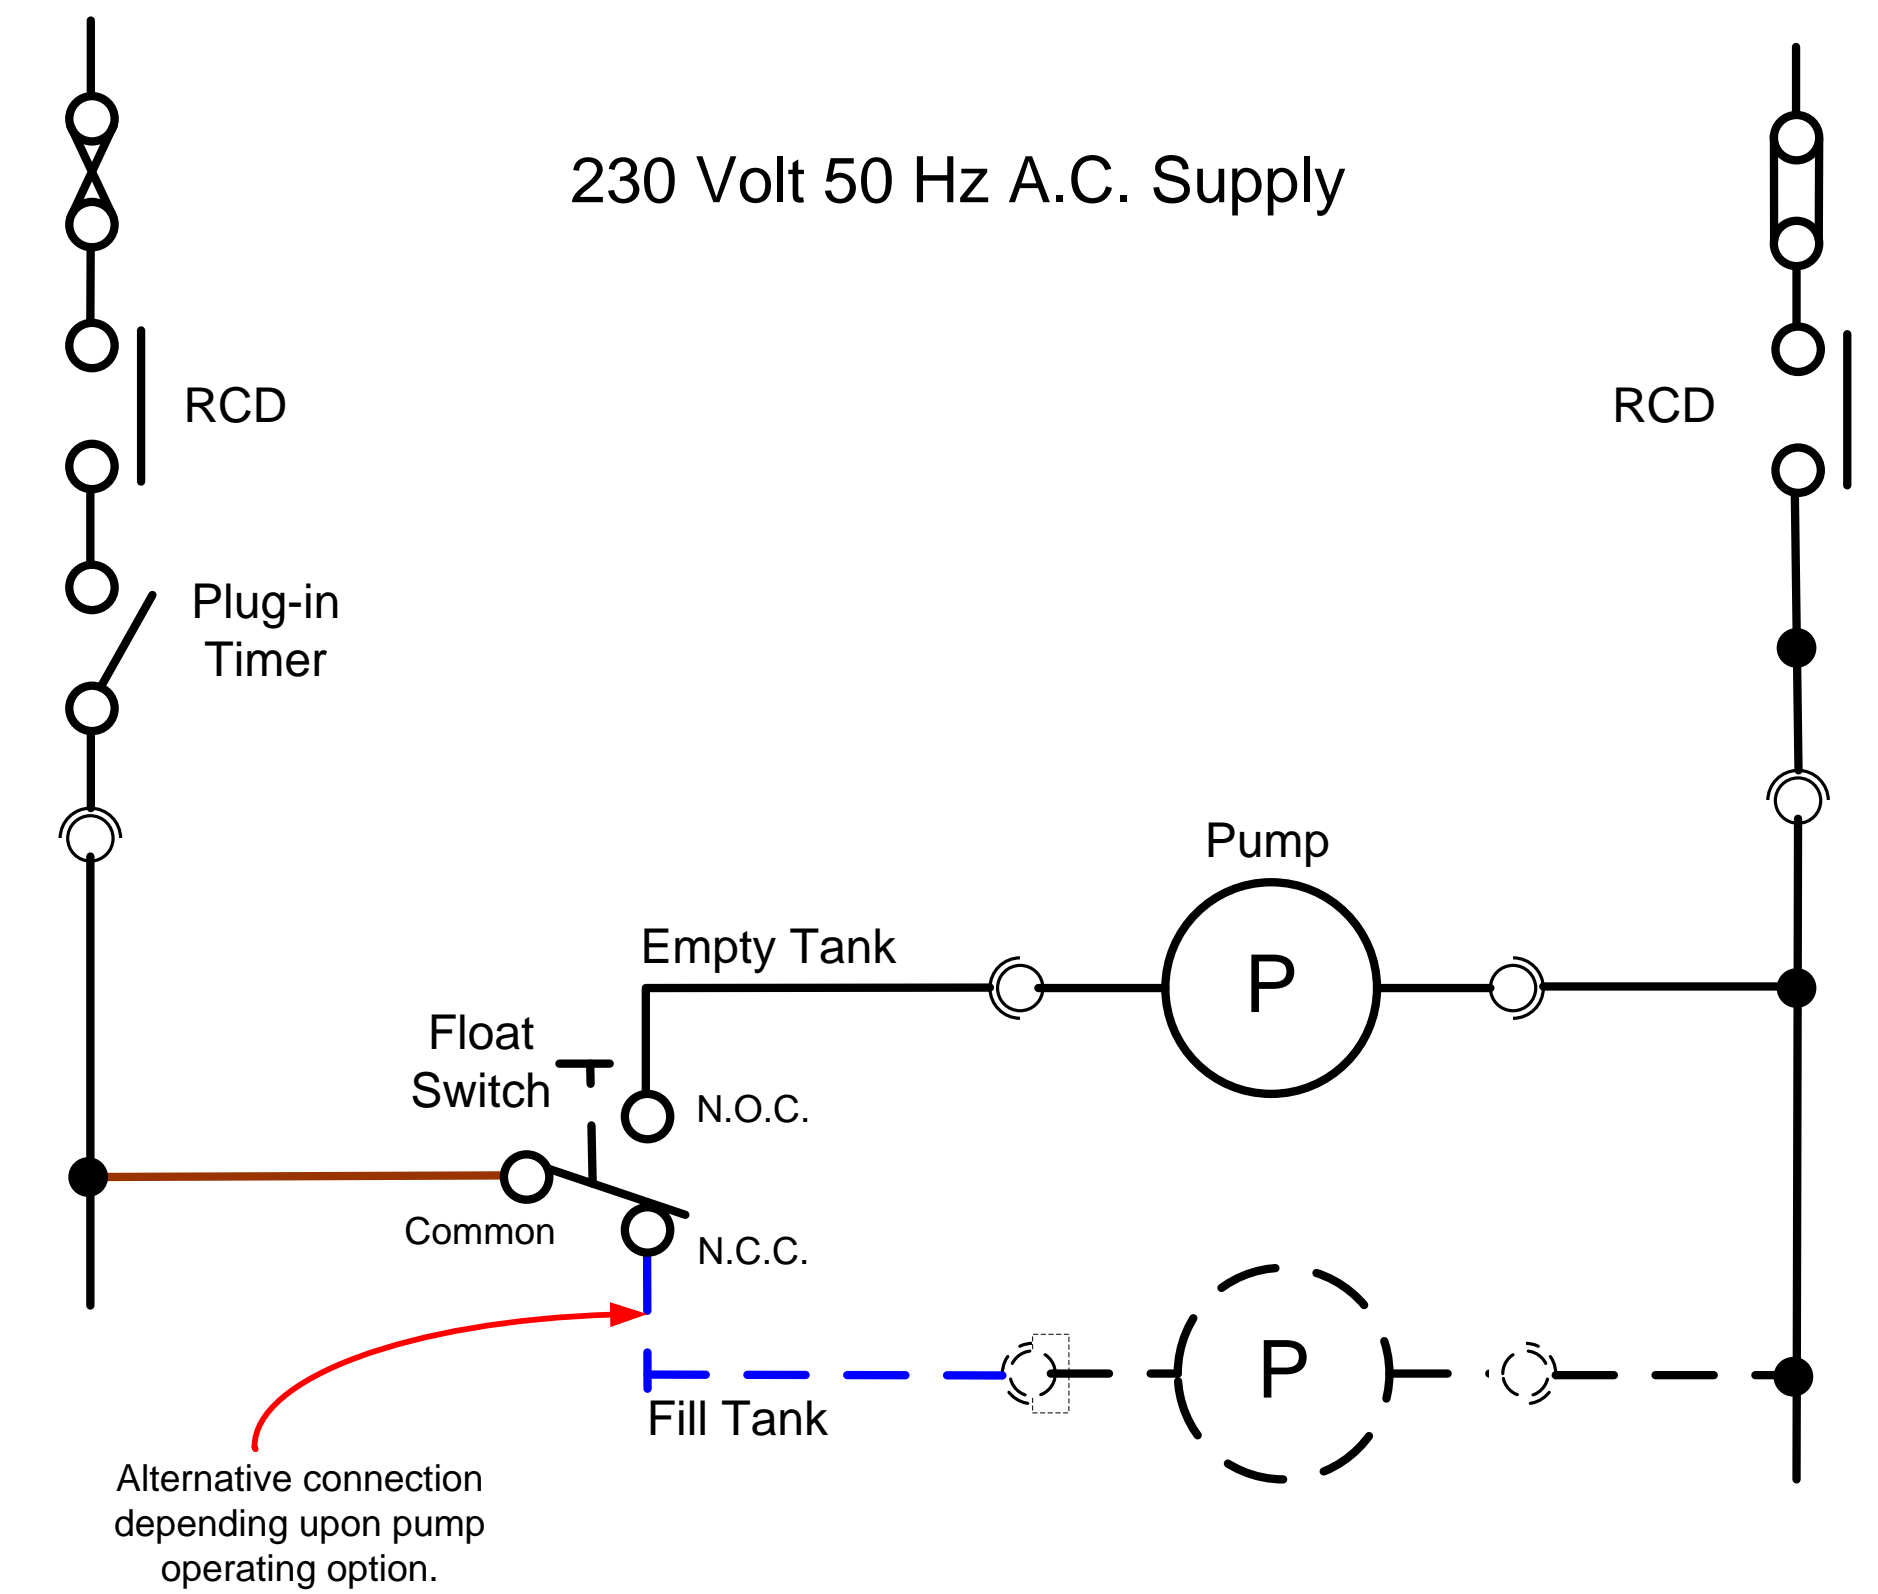

Notes

The above diagram is provided to act as a guide to a working installation. It is **NOT** an installation instruction. A complete installation requires the procurement of additional electrical equipment.

230Volt AC Supply – The Mains Electrical Supply used for this installation **MUST** be provided via a Residual Current Device (RCD)

Mounting/Positioning – It is recommended that the equipment shown in the Connection Diagram should be mounted **INDOORS**, and installed by a suitably qualified authorised person. However the equipment must be installed in a fully weatherproof enclosure if there is any risk of becoming wet, or if sited **OUTDOORS**.


The mains electricity supply MUST be disconnected before any work is carried out on the equipment shown in the Connection Diagram.

This equipment **MUST** be installed by a qualified electrician to the current IEC Regulations and Codes of Practice.

All metalwork used in an installation **MUST** be earthed.

Float Switch – Install to manufacturers instructions.

Float Switch Operation - Example

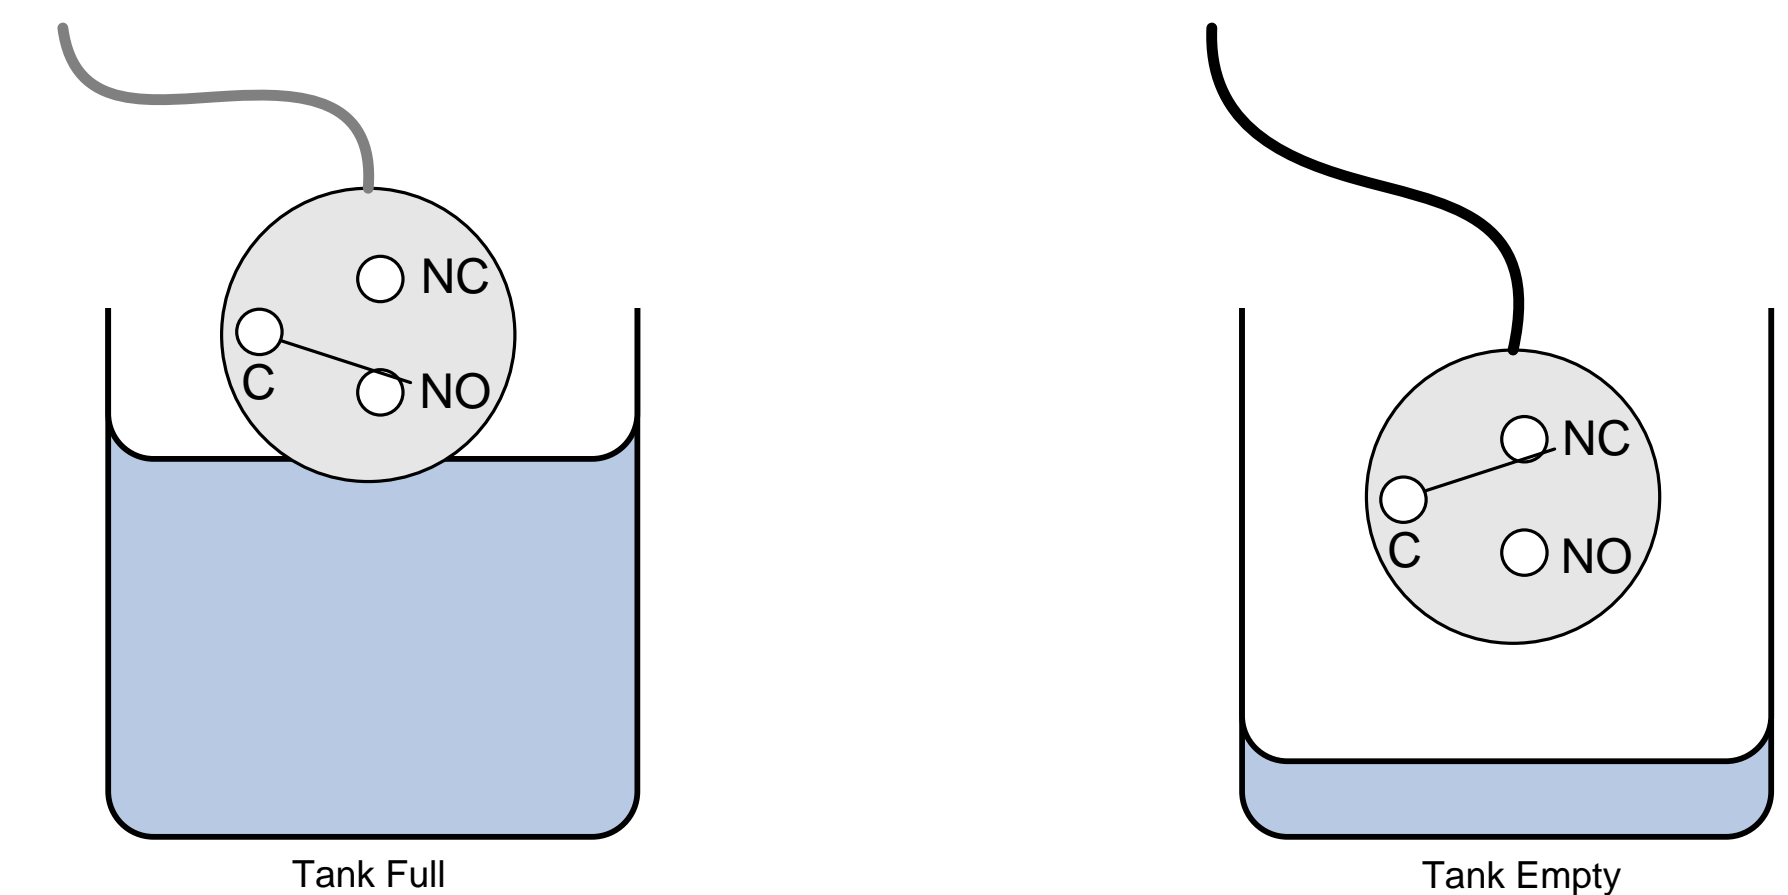

Water Pump Installation
(Guidance Only)